



THANK YOU FOR YOUR PURCHASE.

Installation of the drive wheels

1

Remove the cover and the fastening screws and put them aside, you will need the screws later to attach the new wheel. Please store the hubcaps and old wheels..

2

Easily remove the old wheel by pulling it off the rim.

Now put the new wheel on the rim, making sure that the holes for the screws match the holes in the wheel mount.

3

Now fasten the new wheel with the screws you put aside. Please only tighten the screws hand-tight to avoid damaging the rim.

4

Vibrations can loosen the screws. Therefore, please check the hold regularly and use a special fixing varnish or something similar to prevent the screws from loosening.

**THE RIMS ARE MADE FROM RECYCLED PET.
IF YOU NEED FURTHER HELP, PLEASE CALL US ON
+49 5195 333 7680 OR SEND AN EMAIL TO
SERVICE@ANYPRINT3D.DE**